



SIDEWALK ABUTTING CURB

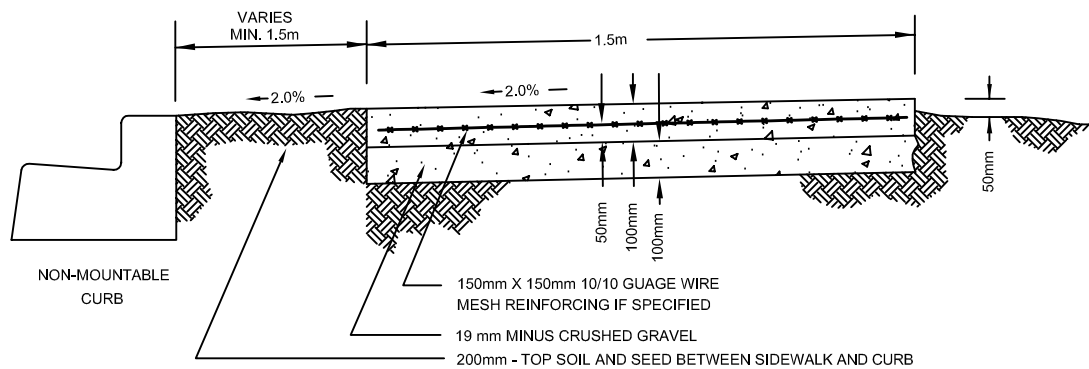

SEPARATED SIDEWALK

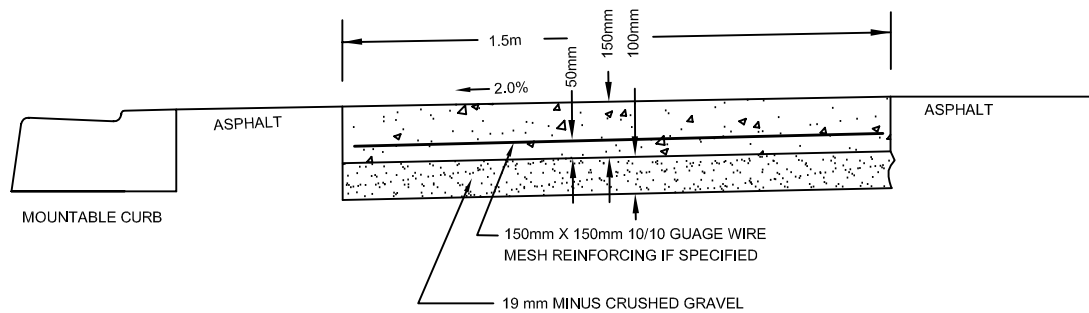

REINFORCED DRIVEWAY CROSSING

NOTES

1. REMOVE ALL SOD AND ORGANIC MATERIALS FROM PROPOSED SIDEWALK LOCATION. APPLY APPROVED WEED KILLER LIBERALLY PRIOR TO INSTALLATION OF GRAVEL IN EXCAVATION. BACKFILL ANY LOW AREAS WITH PITRUN SAND OR GRAVEL
2. WHERE PRACTICAL KEEP SIDEWALK APPROXIMATELY 50mm ABOVE NATURAL GROUNDS.